


- (multisafe 870/871
- (multitronic 881
- (autosafe 833P
- (autotronic 834P

Panik-Griffstangen Montageanleitung

Panic push bars Installation instructions

Maniglione antipanico Istruzioni di montaggio


ART.-NR. / ART. NO. / COD. ART.
MD870055XXX

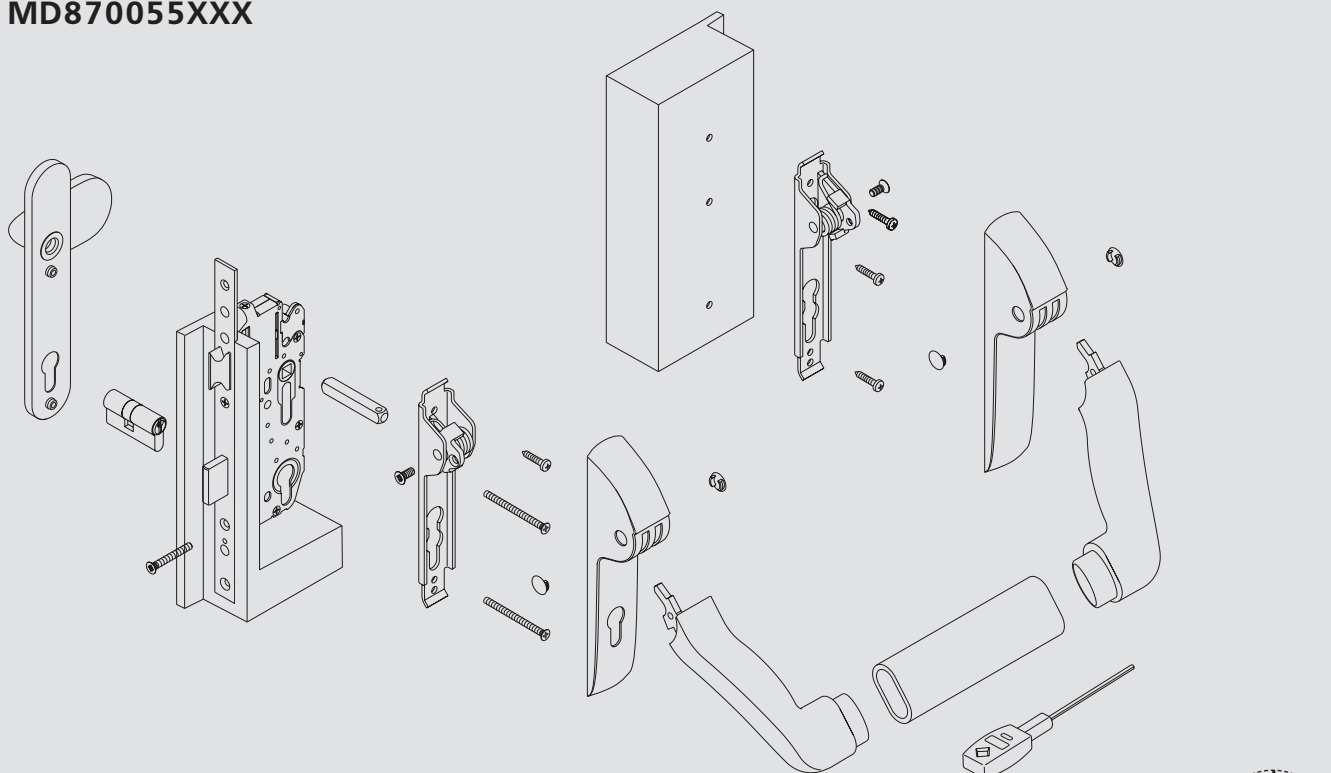

zu Schritt 9 / referring to step 9 / riguardante punto 9:
Kürzen der Griffstange / Shortening the push bar /
Riduzione del maniglione

Länge / Length / Lunghezza

$A = B - 112 \text{ mm}$

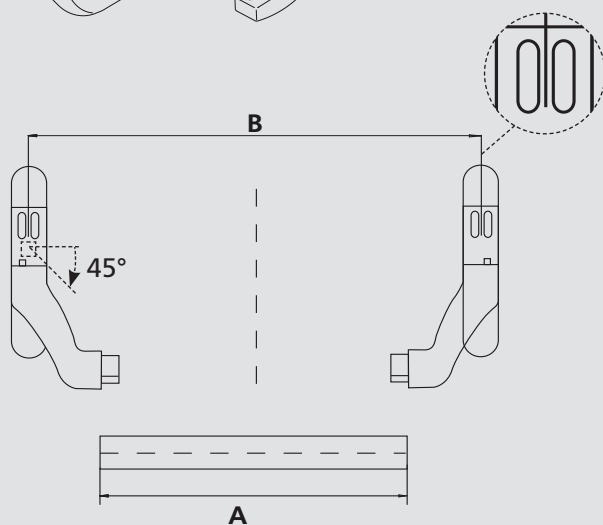

(multisafe
870/871

(multitronic
881

(autosafe
833P


(autotronic
834P

Montageanleitung


Installation instructions

Istruzioni di montaggio


1

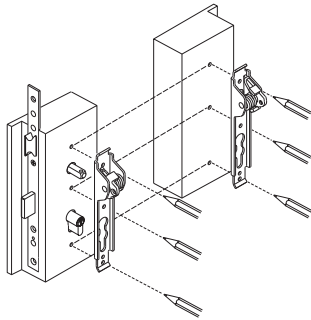


2

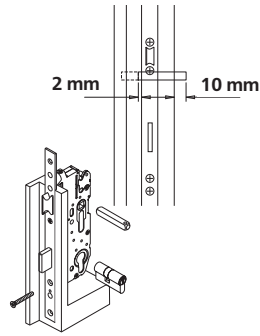


3

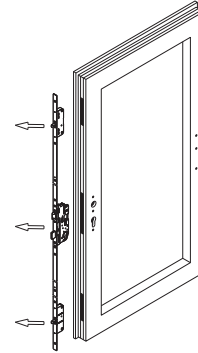


4

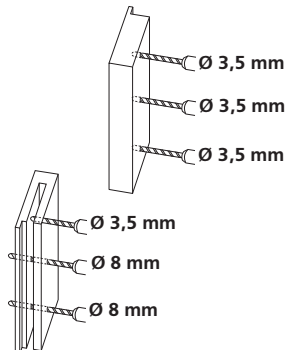


5

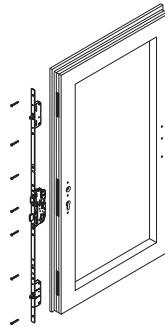


6

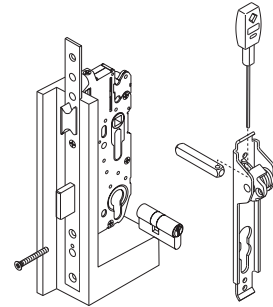


7

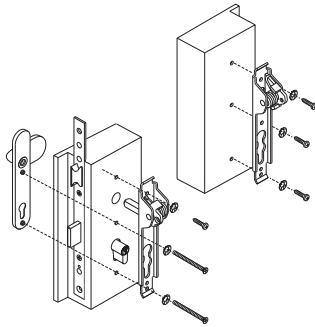


8

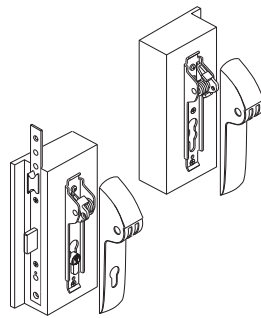


9a

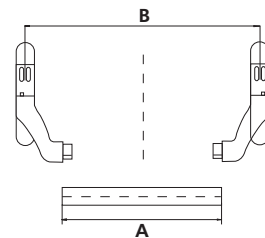


9b

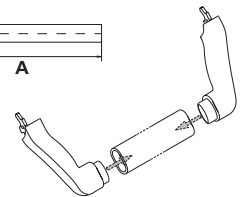


10

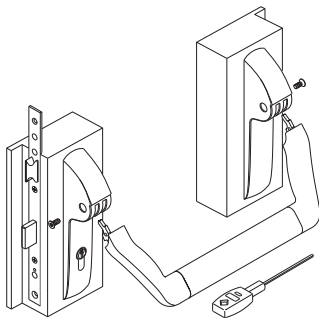

11

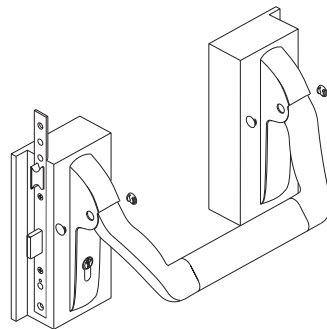

12

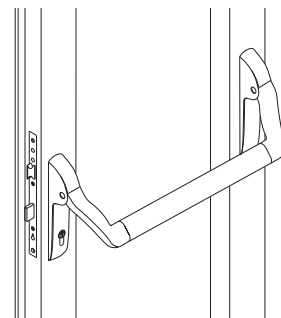

CARL FUHR GmbH & Co. KG

Carl-Fuhr-Straße 12 D-42579 Heiligenhaus
Tel.: +49 2056 592-0 Fax: +49 2056 592-384
www.fuhr.de · info@fuhr.de

FUHR